

HOTLOK®

Installation Guide

HotLok® Pass Through Blanking Panel

Part Numbers

1U - 10112

2U - 10113



Table of Contents

Tools Required for Installation	Page 2
Dimensions and Usable Area	Page 2
Installation Procedures	Page 2
Removal Procedures	Page 2
Installation Images	Page 3-4
General Information	Page 5
Warranty	Page 6

Each carton contains the following items:

- HotLok Pass Through Blanking Panel (10)
- Cage Nuts (22)
- Screws (22)
- Installation Guide (1)



Designer & Manufacturer
(888) 982-7800 www.upsite.com

Installation Guide

HotLok Pass Through Blanking Panel

Tools Required for Installation

Tools Required:

- Phillips head screw driver or drill and bit

Dimensions	Inches	Millimeters
Part No. 10112 - 1U - Overall size (length x height)	19" x 1.75"	482.5 x 44.45mm
Part No. 10113 - 2U - Overall size (length x height)	19" x 3.5"	482.5 x 89mm

Usable Area		
Part No. 10112 - 1U	11.5 sq. inches	282 sq. mm
Part No. 10113 - 2U	42.75 sq. inches	1085 sq. mm

Installation Procedures

Installation of HotLok Pass Through Blanking Panel

1. Attach two cage nuts at the desired position on the server rack where the pass through blanking panel will be mounted.
2. Test fit the blanking panel to the cage nuts to ensure proper alignment. Place a screw through each opening on the blanking panel.
3. Using a screw driver begin to attach the blanking panel to the server rack. Do not over-torque the screws.
4. Once the blanking panel is mounted, cables may be pulled through the brushes.


Removing the HotLok Pass Through Blanking Panel

If for any reason the HotLok Pass Through Blanking Panel needs to be removed, this can be done by removing both screws, followed by the blanking panel and then removing the cage nuts. Cables do not need to be removed.



Installation Guide

HotLok Pass Through Blanking Panel

Install Images

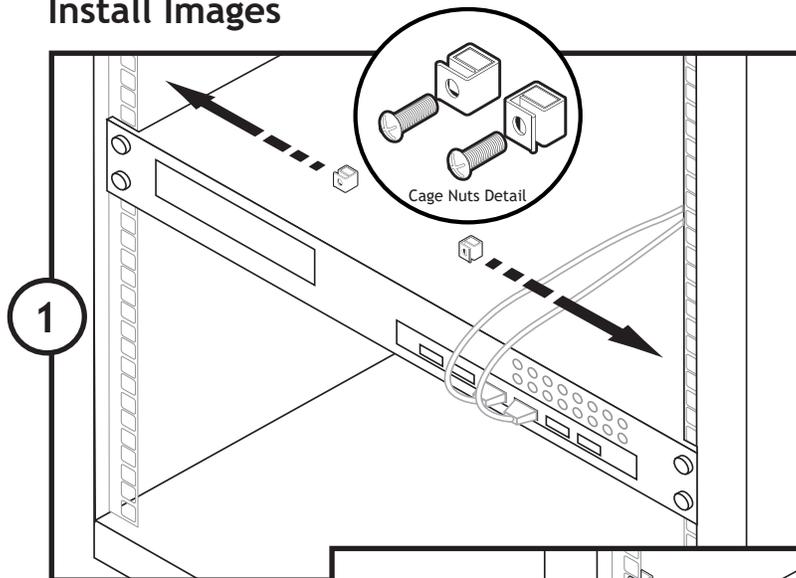

1. Attach two cage nuts to sides of server rack
2. Drive included screws through predrilled panel holes and affix to cage nuts
3. Blanking panel will fit flush to rack face and leave no gaps below or above

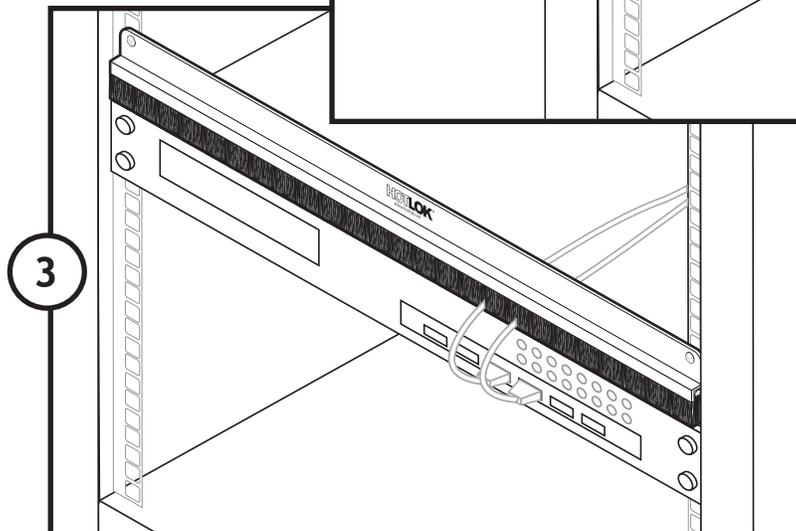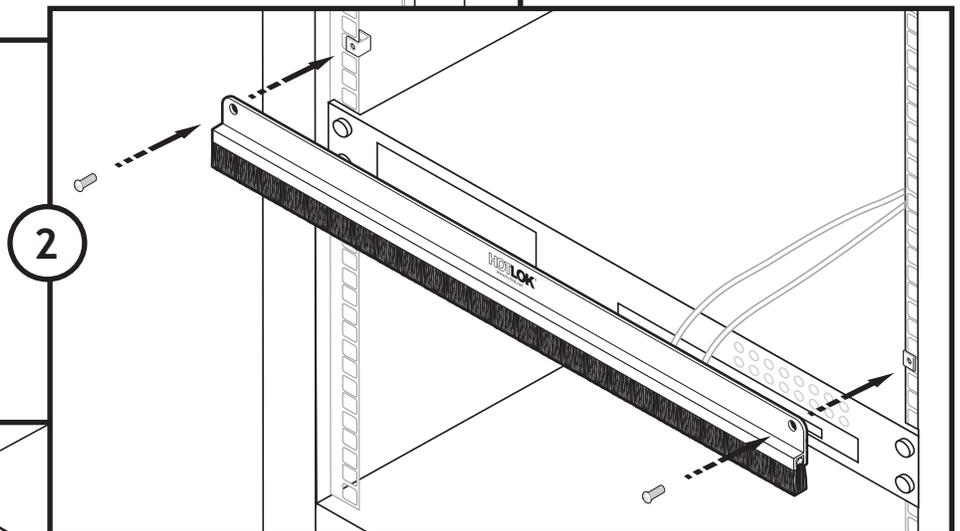

Installation Guide

HotLok Pass Through Blanking Panel

General Information

Safe Installation and Removal of Cables

When pulling or passing cables through the HotLok Pass Through Blanking Panel, please verify that cable terminators or attached components at cable ends are capable of passing through the brush area of the panel without catching. Not ensuring correct dimensions of these components when pulling cables can cause damage to cables, cable terminators, attached components and pass through blanking panels.

Maintaining Proper Cooling of Equipment

Failure to follow computer manufacturer's guidelines for maintaining proper cooling may result in the overheating of equipment. Before sealing rack spaces with blanking panels, ensure that there is adequate airflow to the intake sides of computer equipment or cabinets through devices such as perforated floor tiles or grates. Achieving proper airflow to the intake side of the computer equipment and/or cabinets is the responsibility of the customer.

Safety Requirements

Installers must be familiar with standard safety and risk management practices when working on or in environments for rack equipment.

Customer Support

If you have any questions, please contact us direct at (505) 798-0200, or Toll Free at (888) 982-7800
Email us at info@upsite.com



Printed on
Recyclable Paper

P/N 60224 Rev. A © 2012

Limited Warranty

HotLok Pass Through Blanking Panel

Upsite Technologies, Inc. (the *Company*) warrants to the original purchaser that products delivered hereunder will be free of defects in materials and workmanship for a period of twelve (12) months from the date of purchase (the “Warranty Period”).

The *Company* shall, at its option, within the Warranty Period, either repair or replace free of charge, any product or part thereof found, upon the *Company’s* inspection, to be defective in materials and workmanship, and will return the repaired or replaced product to the purchaser at *Company’s* expense.

For warranty service and shipping instructions, contact the *Company* at the telephone number shown below. If the product is under warranty and the defect appears to be covered by this Limited Warranty, the *Company* will issue to the purchaser a Notice of Authorization For Warranty Return. Products returned to the *Company* for warranty service must be accompanied by a statement of defect, the Notice of Authorization for Warranty Return provided by the *Company*, and proof of purchase.

This Limited Warranty is conditioned on the following:

5. The *Company* must be notified within 12 months of purchase and have been given the opportunity of inspection by return of any alleged defective product free and clear of all liens and encumbrances to the *Company* or its manufacturer; and
6. The product must not have been abused, misused, or improperly maintained, and/or repaired during such period; and
7. Such defect has not been caused by corrosion or exposure to other than ordinary wear and tear.

The company makes no other express or implied warranty or representation of any kind whatsoever including any warranty of merchantability or fitness for a particular purpose and all such other warranties are hereby included.

The Company’s maximum liability hereunder is limited to the purchase price of the product. In no event shall the Company be liable for any consequential, indirect, incidental, or special damages of any nature arising from the sale or use of the product, whether based in contract, tort, strict liability, or otherwise.

Note: Some jurisdictions do not allow limitations on incidental or consequential damages or how long an implied warranty lasts, so that the above limitations may not fully apply. This warranty gives specific legal rights and you may also have other rights which may vary from jurisdiction to jurisdiction.

For complete warranty and repair information Call (888) 982-7800 or visit upsite.com

Register your product online at www.upsite.com/warranty to initiate your warranty.