



6', 7', and 8' Sliding Doors Installation Guide

6' Sliding Doors: For an aisle width of 5'-11" to 6'-2"
7' Sliding Doors: For an aisle width of 6'-11" to 7'-2"
8' Sliding Doors: For an aisle width of 7'-11" to 8'-2"

NOTE: Vertical Post positions are not able to be swapped as with the 4' Sliding Doors. To accommodate smaller aisles, please refer to the Aisle Width Reduction Kit instructions on page 14.

Before You Begin

We recommend that you familiarize yourself with the contents of this installation guide before beginning the installation process. Doing so will save you a lot of time and effort. Including a review of this guide, it shouldn't take longer than twenty minutes to set up the AisleLok[®] Sliding Doors. We highly recommenced two people for installation.

The bulk of this document covers tool-less installation on IT cabinets, but there are also sections on mechanical attachment as well as set up using one of our Adjustable Mounting Posts.

Although the AisleLok[®] Sliding Doors are very easy to assemble and can typically be installed in just minutes, please read through these instructions thoroughly for proper installation in your environment. Should you have any installation issues, please refer to the troubleshooting section of this guide on page 22.

Table of Contents

- 1 Installation Tips
- ² Sliding Doors Installation
- 11 Transom Window Installation
- 14 Aisle Width Reduction Kit Installation
- ¹⁶ Adjustable Mounting Post Installation
- ¹⁹ Mechanical Installation
- ²² Troubleshooting
- 24 Limited Warranty

Installation Tips

GENERAL

While it is possible for a single person to install the Sliding Doors, we recommend a two person installation team.

To get a better understanding of the installation process, please view the Installation Overview and Timed Installation videos located on the Sliding Doors page of the Upsite Technologies website.

DOOR ALIGNMENT

- There are three types of Sliding Door alignment considerations: first is aligning the seam between the doors where they meet, the second is aligning the face of the doors, and the third is aligning the height of the doors.
- Seam Between Doors. Alignment of the seam between the doors is achieved by placing spacers under the door hanger bracket as described in the installation instructions (See page 8, Step 4.4, Fig. 4).
- Door Height. In some cases, even with the doors meeting parallel, the doors may hang at different heights. In these cases, additional Sliding Door Shims can be placed under the hanger bracket on both sides of the lower door to raise it to the height of the other door.
- Placing Sliding Door Shims on Studs. When placing shims on the studs attached to door slides it is not necessary to fully remove the doors. First be sure that the thumb screws have been removed, and then lift up one side of the door, pivoting the door on the other post. While one person holds the door up another person can place shims on the desired stud. When shims have been placed, the door can be lowered down and the studs will align with the holes in the hanger bracket. This is much simpler than removing the door completely.

Faces of Doors Not Flush. This is due to the cabinets not being parallel/plum. The tops of the doors will always be aligned because they are connected to the header. The alignment of the bottoms of the doors is dependent on how plumb the cabinets are on each side. Use a level and adjust the leveling feet until the cabinets are plumb.

PLACING DOOR PANELS ON HEADER

When placing the door panels on the header it can be challenging to align the studs on the header with the holes in the hanger bracket attached to the door. One way to make this process easier is to place the door panels on the header an inch or two in the direction of being open, in other words away from the center line, then slide the door panels towards the center line or fully closed position. As the studs and holes lineup the door panels will slide down into place.

TETHERS AND CABLE-LOCKS

- To simplify the process of securing the tethers and cable locks it is useful to pre-position the cable lock on the tether. After the tether has been secured to the header with the thumb screw, determine the best final position for the cable lock. Adjust the position of the cable lock on the tether so there is no slack between the header and the cable lock. Then thread the loose end of the tether through the desired hole in the top of the cabinet or other secure location and then run the tether through the cable lock and remove all slack (See pages 6 and 7).
- Attach the tether to the end of the header with the thumb screw before looping the tether through a secure location.

6', 7', and 8' Sliding Doors Installation

H

x12

Included Parts

VERTICAL POSTS	
A Vertical Post Left	x 1
B Vertical Post Right	x 1
HEADER ASSEMBLY	
C Header Assembly	x1
DOOR PANELS	
Door Panel Left	x1
Door Panel Right	x 1
SIDELIGHTS	
F Sidelight Left	x 1
G Sidelight Right	x 1
END CAP KIT	
(H) Thumb Screws	x2
Header End Cap Left	x 1
Header End Cap Right	x1
TETHER KIT	
K Tether Cable	x2
HEADER ASSEMBLY	
L Header Knob	x4

M Sliding Door Shims

NOTE: No Tools Required . . •• • -000 G (A D E В F L M K J \bigcirc 0 0 x12 x2 x2 x4 x1 x1

Attach Sidelights to the Vertical Posts and mount them to cabinets.

NOTE: Please refer to Mechanical Installation on page 17 for instructions on how to mechanically fasten vertical posts to cabinets.


NOTE: If you are utilizing an Aisle Width Reduction Kit, please go to page 14 for installation instructions before beginning step 1.1.


1.1 Stand the left Vertical Post (latch on the left, shoulder screws on the right) and left Sidelight (keyhole slots on the left) vertically, with the mating edges aligned. Tilt both to the right until the shoulder screws in the Vertical Post align with and drop into the keyhole slots in the Sidelight (Figure 1), then tilt them back to the left to lock them together (Figure 2).

1.2 Slightly angle the Vertical Post and Sidelight assembly and place the bottom of the post up against the bottom front edge of the cabinet frame, aligning Anti-Shear Plates to the edge of the cabinet frame. Pivot the Vertical Post and Sidelight assembly up against the side of the cabinet. NOTE: Anti-Shear Plates should be flush against the cabinet frame, behind the cabinet door, if present (Figure 3).

1.3 Lock each of the (3) magnets on top of the Vertical Post by turning the knob clockwise to the lock position. The Vertical Post and Sidelight assembly will be secured to the cabinet (Figure 4).

1.4 Repeat the same process for the right side Vertical Post and Sidelight components.

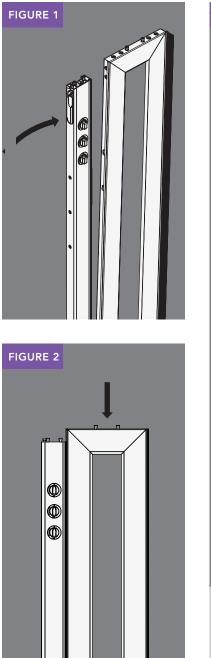

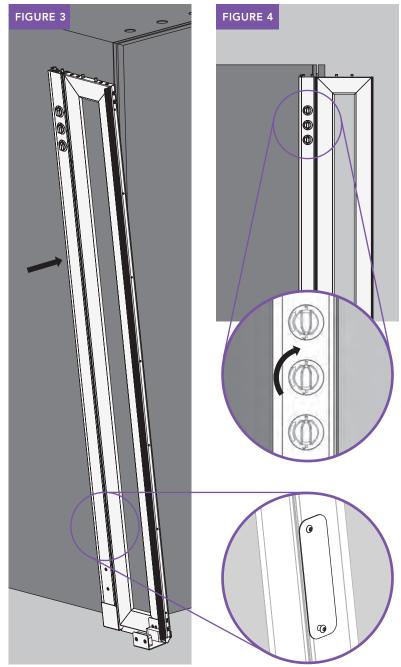

Install Header on top of the Vertical Posts and Sidelights.


PREPARATION: Make sure Vertical Posts and Sidelights are flush; unaligned top surfaces will interfere with Header installation.


2.1 Hold the Header Assembly on top of the Sidelight with the t-slot facing down and the Door Slides facing away from the cabinets. Position the Header Assembly so the left end rests on the left Sidelight just inside of the locating pins and the other side of the header is positioned just above the right Sidelight and Vertical Post. The Header will be nearly level with the floor and as close to the cabinet as possible (Figure 1).


2.2 Slide the Header Assembly to the left so the locating pins on top of the left Sidelight and Vertical Post slide into the t-slot in the bottom of the header. Ensure the cinch down latch pin is aligned with the t-slot and also slides into the Header (Figure 2).

 
2.3 Slide the Header Assembly to the left until the right end of the header is just past the locating pins on the right Sidelight (Figure 3).

NOTE: Unlocking the Vertical Post MagSwitches allows for movement of the Vertical Post and Sidelight to make aligning the locating pins easier.

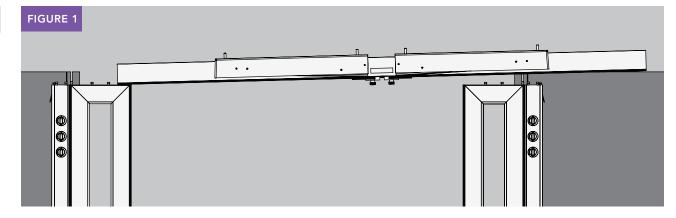

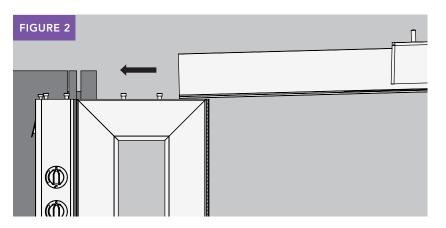

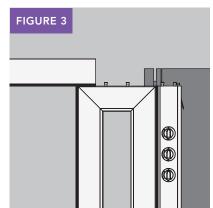





2.4 Slide the Header Assembly back to the right, such that the locating pins on top of the right Sidelight and Vertical Post and the cinch down latch pin slide into the t-slot in the bottom of the Header (Figure 4).


2.5 Center the Header so an even length of Header protrudes past each of the Vertical Posts (Figure 5).

2.6 Lock the Header Assembly to the Vertical Post(s) by pulling down on the Vertical Post latch handles (Figure 6).

FIGURE 4

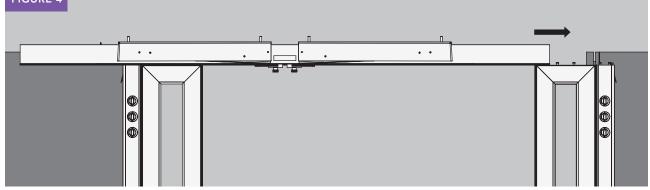

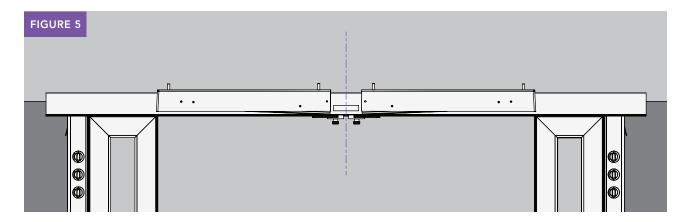

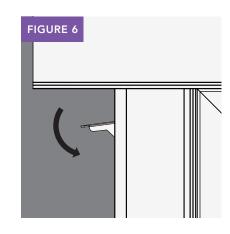

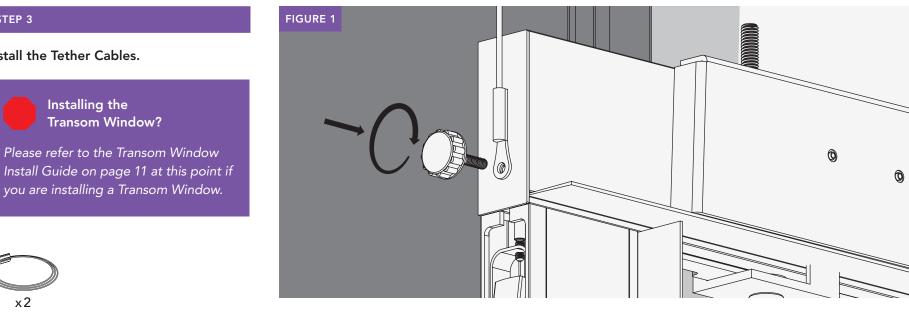


FIGURE 2 0

STEP 3

Install the Tether Cables.

Install Guide on page 11 at this point if you are installing a Transom Window.




3.1 Remove Thumb Screw. Place the Thumb Screw through the eyelet at the end of the Tether cable, then partially thread the Thumb Screw through the Header End Cap and into the end of the Header Assembly. Do not fully tighten the Thumb Screw at this point (Figure 1).


3.2 Pull the end of the Tether Cable over the top of the cabinet and loop through a secure location (Figure 2).

3.3 Once the Tether Cable is looped through a secure location, push the end of the Tether Cable through the cable lock in the opposite direction, and pull gently to remove all slack (Figure 3).

3.4 Tighten the Thumb Screw to secure the Tether Cable and Header End Cap to the Transom Window (Figure 4).

3.5 Repeat on the opposite end of the Header Assembly.

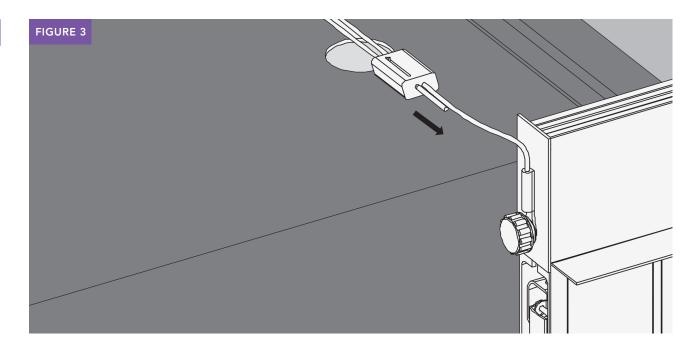

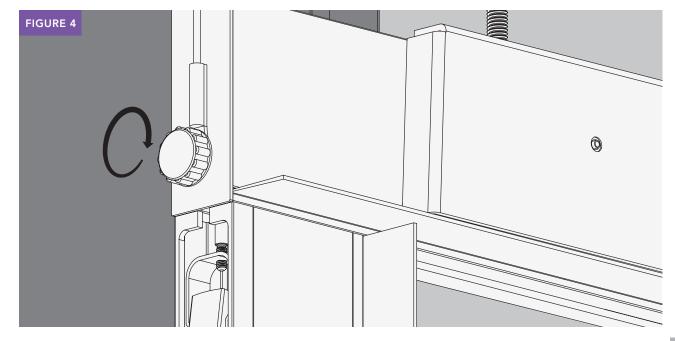

Hang Door Panels on Header Assembly

 



4.1 Align the bottom of the door inside the guide channel (Figure 1).


4.2 Align the Door Panel cleat with the slider studs on the Header Assembly (Figure 2).


4.3 Place the Door Panel cleat on top of the slider studs and make sure the bottom of the Door Panel lands inside the guide channel (Figure 3).

4.4 Check the seam where the Door Panels meet. If the Door Panels are not parallel then lift the Door Panel and place Sliding Door Shims on the slider studs under the door cleat to fine tune the Sliding Door Panel alignment (Figure 4).



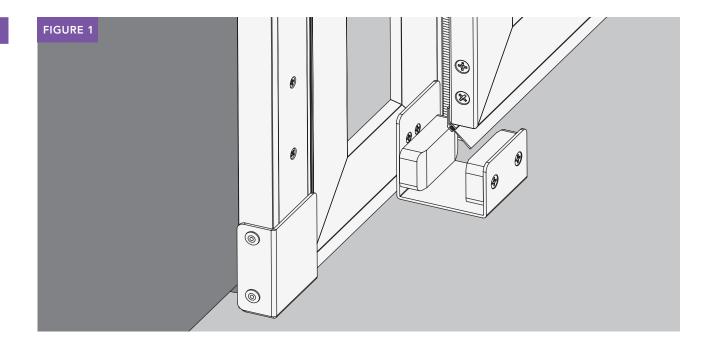


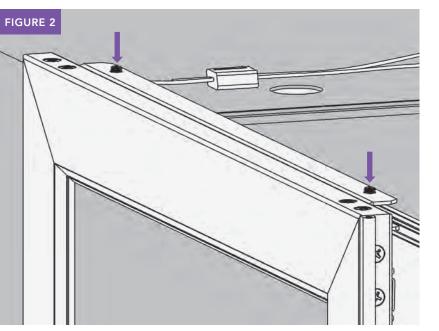

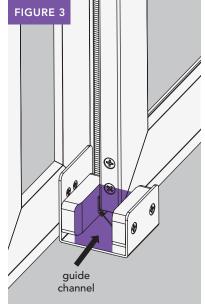

4.5 Use the Header Knobs to secure the Door Panel to the slider (Figure 5).

4.6 Repeat for the opposite door.

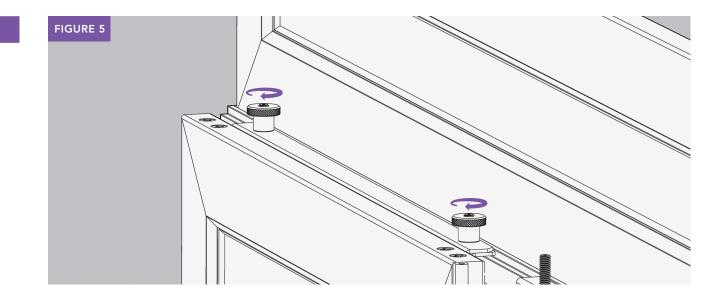

Sliding Doors Stay Open Mechanism

STEP 1


Adjusting and using the Stay Open Mechanism.


The Sliding Doors have a Stay Open Mechanism which can be adjusted to keep the Sliding Doors open at different widths.

To adjust the Stay Open Mechanism, loosen the Thumb Screw approximately one rotation, and slide the mechanism to the location you want the doors held open.


To use the Stay Open Mechanism, open a door past the mechanism then rotate the lever out to 90 degrees to engage the physical stop (Figure 1).

To release the Stay Open Mechanism, push the door open slightly and rotate the lever back under the Header. Repeat for each side (Figure 2). The Sliding Doors will now close normally.

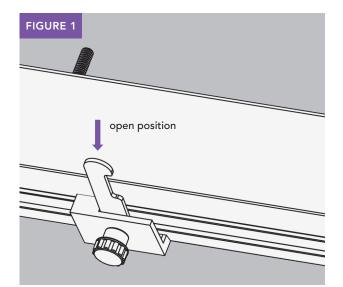

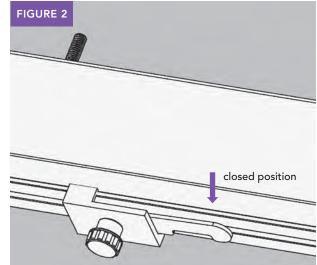

Transom Window Installation

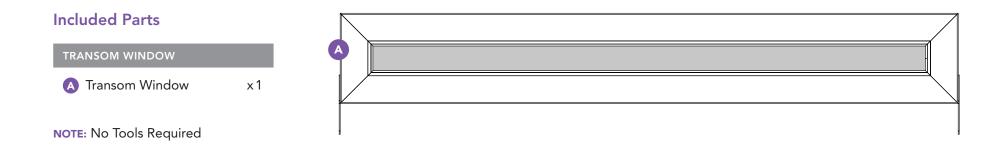

TRANSOM WINDOW INSTALLATION


PREPARATION: If the Transom Window is being installed at the same time as the Sliding Door, skip Step 1 below.

NOTE: Make sure not to set the Transom Window on End Caps to prevent bending them. Always remove the Transom Window when relocating the doors.

TW.1 Remove Thumb Screws, Tether Cables, and Header End Caps on previously installed Sliding Doors. The Header End Caps that came with the doors will not be used (Figure 1).

TW.2 Place Transom Window on top of header with the attached Transom End Caps sliding over both ends of the Header Assembly (Figure 2).

TW.3 Place a Thumb Screw through the eyelet at the end of a Tether Cable, and then partially thread the Thumb Screw through the Transom End Cap (attached to the Transom Window) and into the end of the Header Assembly. Note: Do not fully tighten the Thumb Screw at this point (Figure 3).

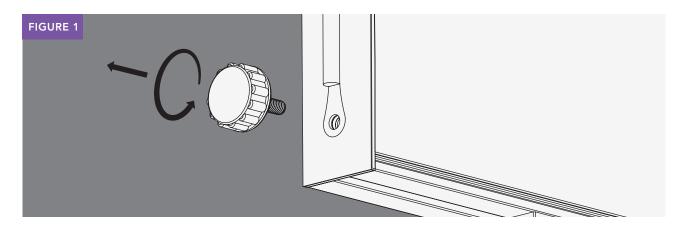




TRANSOM WINDOW INSTALLATION


TW.4 Pull the end of the Tether Cable over the top of the cabinet and loop through a secure location. Once the Tether Cable is looped through a secure location, push the end of the cable through the Tether Cable Lock in the opposite direction, and pull tightly to remove all slack (Figure 4).

TW.5 Tighten the Thumb Screw to secure the Tether Cable and End Cap (Figure 5).

TW.6 Repeat on the opposite end of the Transom Window to secure the Transom Window to the Header Assembly.


Please go to Step 4 on page 8 to continue Sliding Doors Installation.

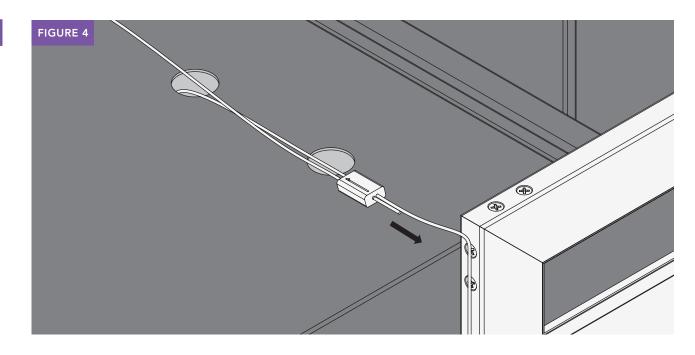

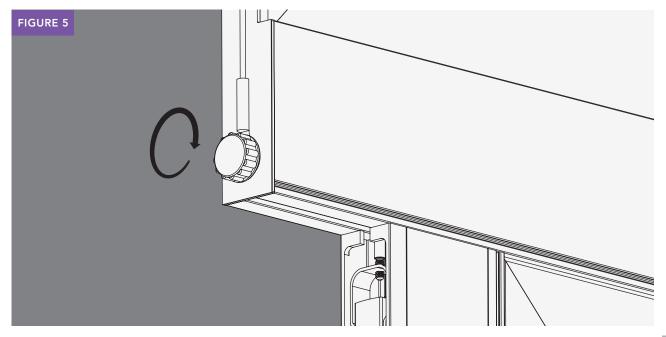

Aisle Width Reduction Kit Installation

Installing the AisleLok® Sliding Doors on non-standard/smaller size aisles can be achieved by utilizing an Aisle Width Reduction Kit. We offer multiple kits to accommodate a variety of aisle widths. Please contact us or visit our website to determine which kit is right for your application.

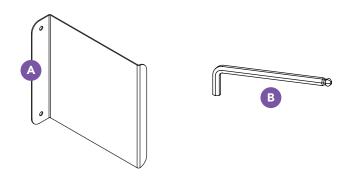

Included Parts

EXTENDED ANTI-SHEAR PLATE
A Extended Anti-Shear Plate x4
B Hex Wrench x 1

AISLE WIDTH REDUCTION KIT INSTALLATION

PREPARATION: Metallic side panels must be installed on aisle end cabinets.

RK.1 Locate the left Vertical Post. The AisleLok[®] Sliding Doors come preinstalled with standard Anti-Shear Plates (Figure 1).

RK.2 Remove the top Anti-Shear Plate with the included hex wrench by removing the top and bottom fastener (Figure 2).


RK.3 Replace the standard Anti-Shear Plate with an extended Anti-Shear Plate and ensure that the collar is installed on the bottom fastener (Figure 3).


RK.4 Remove the bottom Anti-Shear Plate with the included hex wrench by removing the top and bottom fastener (Figure 4).

RK.5 Replace the standard Anti-Shear Plate with an extended Anti-Shear Plate and ensure that the collar is installed on the top fastener (Figure 5).


RK.6 Repeat steps 1–5 for the right Vertical Post.


NOTE: Return to page 3, step 1.1 to continue Sliding Doors installation.

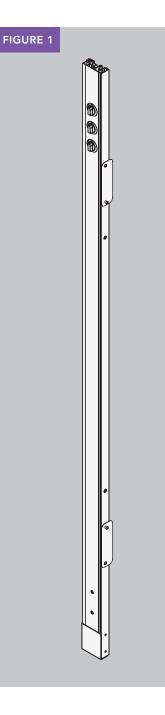

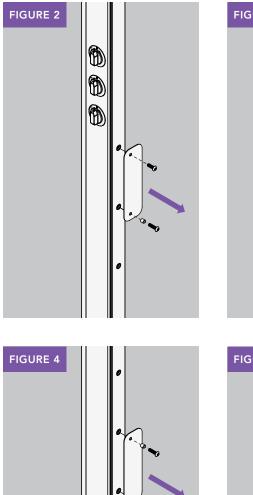

.

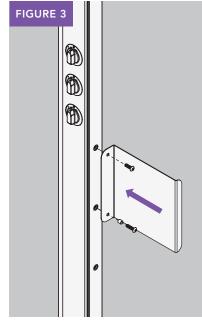

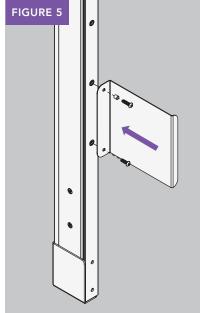

Adjustable Mounting Post Installation


The Adjustable Mounting Post (10169) serves as a vertical support structure for the attachment of containment doors (and/or Rack Gap Panels) in uneven rows.

NOTE: The Adjustable Mounting Post is sold separately. Contact your sales representative or see our website for more information.

Included Parts

ADJUSTABLE MOUNTING POST

Adjustable Mounting Post, Top	x1
B Adjustable Mounting Post, Bottom	x 1
POST ASSEMBLY HARDWARE	
C 3/8" Flanged Hex Head Screws	x2
FLOOR MOUNTING KIT	
D 1-5/8" W x 13/16" H x 30" L Unistruts	x2
Carriage Bolts	x4
Flat Washers	x4
G Lock Nuts	x4

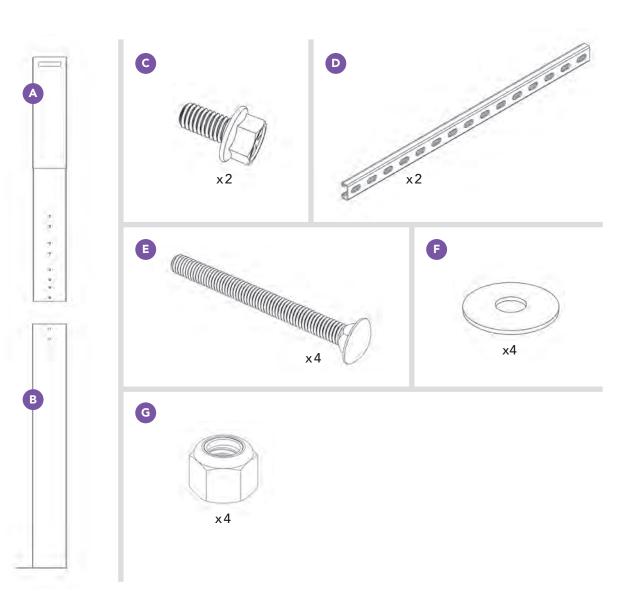

ADJUSTABLE MOUNTING POST INSTALLATION

Attaching the Vertical Posts


PREPARATION: Install the Adjustable Mounting Post separately. Please refer to the Adjustable Mounting Post Installation Guide. When using the Adjustable Mounting Post with AisleLok® Sliding Doors, the vertical posts may be mounted on either the wide or narrow side of the Adjustable Mounting Post.


AMP.1 Slightly angle the Vertical Post and place the bottom of the post up against the bottom edge of the Adjustable Mounting Post. Pivot the Vertical Post up against the side of the Adjustable Mounting Post, align the Vertical Post with the edge of the Adjustable Mounting Post (Figure 1).

AMP.2 Lock each of the magnets on top of the Vertical Post by turning the knobs clockwise to the lock position (Figure 2).

AMP.3 Attach the Anti-Shear Plates to the side of the Vertical Post. Anti-Shear Plates should align with the front edge of the Adjustable Mounting Post (Figure 3).

AMP.4 Repeat the same process for the remaining Vertical Post, on either a cabinet frame or another Adjustable Mounting Post.

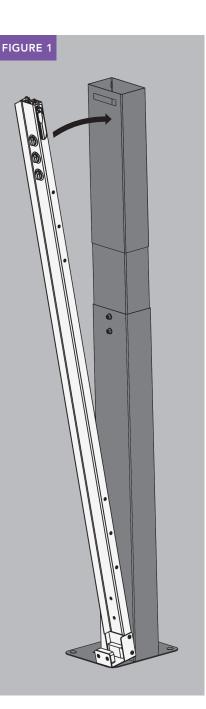

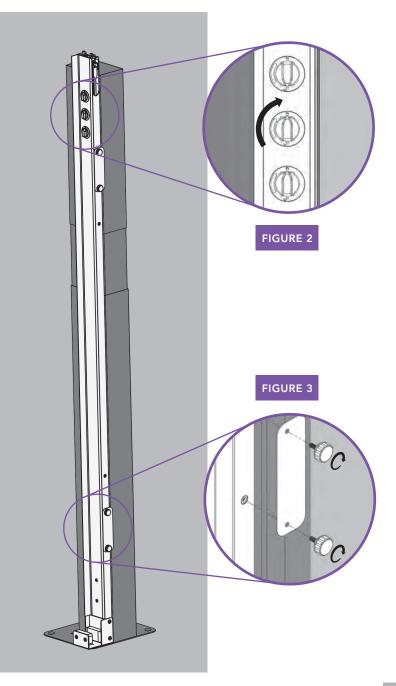

ADJUSTABLE MOUNTING POST INSTALLATION

Attaching the Tether Cable to the Adjustable Mounting Post


AMP.5 Place a Thumb Screw through the eyelet at the end of the Tether Cable through the Header End Cap and into the end of the Header Assembly. *Do not fully tighten the Thumb Screw at this point* (*Figure 4*).


AMP.6 Run the end of the Tether Cable into the top of the adjustable mounting post and loop it through one of the D-Rings that are on the inside of the top post assembly (Figure 5).


AMP.7 Once the Tether Cable is looped through the D-Ring, push the end of the Tether Cable through the Cable Lock in the opposite direction, and pull to remove all slack (Figure 6).

AMP.8 Tighten the Thumb Screw to secure the Tether and Header End Cap and repeat on the opposite end of the Header Assembly.

Please go to Step 4 on page 8 to continue Sliding Doors Installation.

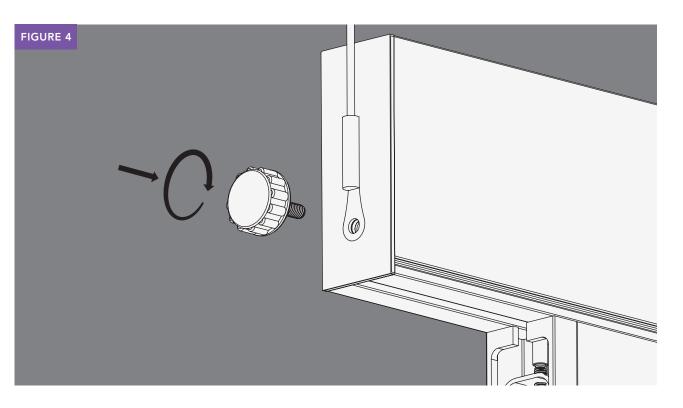

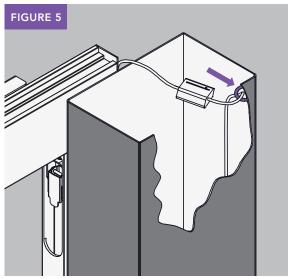

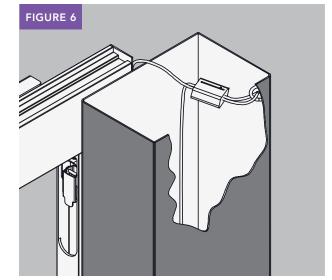

Mechanical Installation

TIPS

The Sliding Door's Vertical Posts may need to be mechanically fastened to cabinets for some of the following reasons:

- Magnets do not sufficiently adhere to cabinets with side panels that cover the frame
- Magnets do not adhere to cabinets with aluminum frames
- Magnets do not sufficiently adhere to cabinets with thin sheet metal frames
- Mechanical attachment is preferred or required

MECHANICAL INSTALLATION

Mechanical Installation of Sliding Doors


NOTE: Hardware not included! Max drill bit size: Ø .201" [5mm]

MI.1 Determine where on the cabinet you are going to place the Vertical Post (Figure 1).


MI.2 Locate the two guides which are slight indentations that run vertically on the Vertical Post. Guides are located to insure the inner structural members will be missed when drilling and screwing through the Vertical Posts (Figure 2).

MI.3 Slightly angle the Vertical Post and place the bottom of the post up against the bottom edge of the cabinet frame. Pivot the Vertical Post up against the side of the cabinet (Figure 3).

MI.4 Once the hardware locations on the Vertical Post and cabinet are determined, remove the Vertical Post from the server room and drill the necessary through holes. Make sure to remove all shavings and or debris before Vertical Posts are returned to the server room (Figure 4).

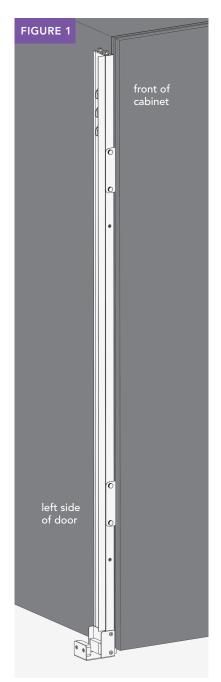



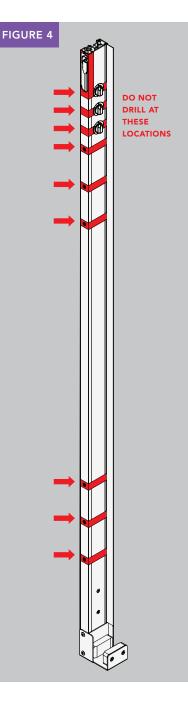


MECHANICAL INSTALLATION

MI.5 Slightly angle the Vertical Post and place the bottom of the post up against the bottom edge of the cabinet frame. Pivot the Vertical Post up against the side of the cabinet. Align the Vertical Post with the determined hardware locations on the cabinet (Figure 5).

MI.6 Use hardware to attach the Vertical Post to the cabinet.

MI.7 If being placed on ferrous metal, lock each of the magnets on top of the vertical post by turning the knobs clockwise to the lock position (Figure 6).

MI.8 Repeat the same process for the remaining Vertical Post.

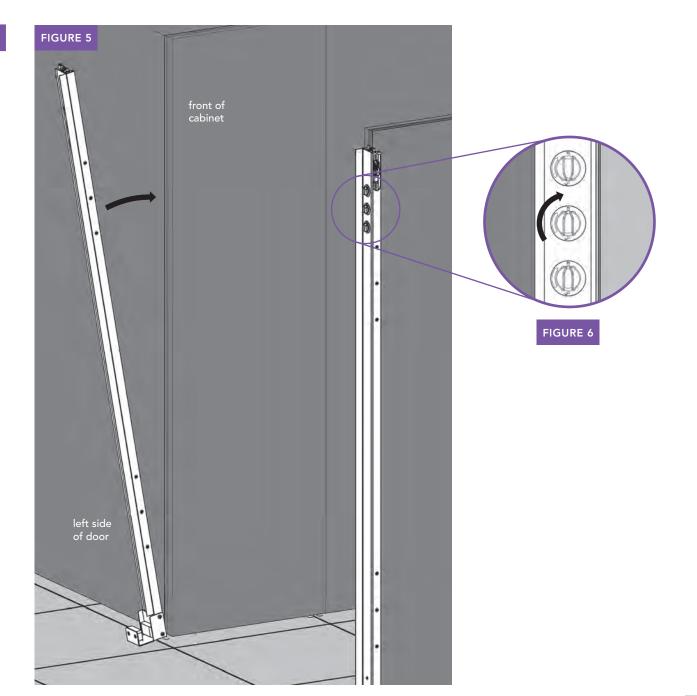

Troubleshooting

DOOR EDGES ARE NOT PARALLEL WHERE THEY MEET

POSSIBLE CAUSE: Normal material variations.


SOLUTION: Use included shims to adjust the side to side angle of the doors. If there is a gap at the top where the doors meet, then place a shim(s) on the outer stud(s). If there is a gap at the bottom of the doors, then place a shim(s) on the inner stud(s).

See Figure 1 (gap at the top) and Figure 2 (gap at the bottom).

TETHER CABLE-LOCK IS STUCK

POSSIBLE CAUSE: The lock has been engaged with force.

SOLUTION: While applying pressure to the cable release tab, push the cable into the cable-lock in the opposite direction you are trying to move it, the cable will then release.

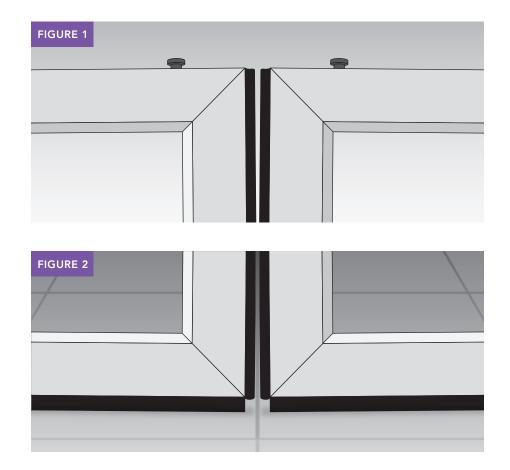

DOORS ARE NOT ALIGNED AT THE BOTTOM, ONE IS MORE FORWARD

POSSIBLE CAUSE: The mounting surfaces are not parallel. If doors are mounted to cabinets then the cabinets are not plumb.

SOLUTION: Adjust the leveling feet of the cabinets to bring the sides of the cabinets into the same plane. From outside the aisle looking at the doors, if the right side door is more forward at the bottom, then use the leveling feet to tilt the cabinet on the right toward you. If the door on the right is further back at the bottom, then tilt the cabinet on the right away from you.

See Figure 3.


DOORS DO NOT CLOSE ALL THE WAY, OR LAG WHEN CLOSING

POSSIBLE CAUSE: Uneven floors cause excessive drag on the bottom brush seal.

SOLUTION: Use the included shims to raise both doors. Place the same number of shims on each of the slide studs to raise both doors evenly.

POSSIBLE CAUSE: The header is not level.

SOLUTION: Ensure the header is level. To adjust for floors that are not level, release the Magswitch magnets, pry the Vertical Post up and place shims under the post until the header is level. Engage the Magswitch magnets.

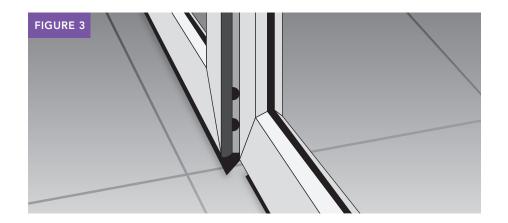

Limited Warranty

Upsite Technologies, Inc. (the Company) warrants to the original purchaser that products delivered hereunder will be free of defects in materials and workmanship for a period of twelve (12) months from the date of purchase (the "Warranty Period").

The Company shall, at its option, within the Warranty Period, either repair or replace free of charge, any product or part thereof found, upon the Company's inspection, to be defective in materials and workmanship, and will return the repaired or replaced product to the purchaser at Company's expense.

For warranty service and shipping instructions, contact the Company at the telephone number shown below. If the product is under warranty and the defect appears to be covered by this Limited Warranty, the Company will issue to the purchaser a Notice of Authorization For Warranty Return. Products returned to the Company for warranty service must be accompanied by a statement of defect, the Notice of Authorization for Warranty Return provided by the Company, and proof of purchase.

This Limited Warranty is conditioned on the following:

The Company must be notified within 12 months of purchase and have been given the opportunity of inspection by return of any alleged defective product free and clear of all liens and encumbrances to the Company or its manufacturer; and

The product must not have been abused, misused, or improperly maintained, and/ or non-Upsite authorized repair performed during such period; and Such defect has not been caused by corrosion or exposure to other than ordinary wear and tear; and

The installation and use of the product has been in accordance with the manufacturer's instructions and not been modified or customized to include but not limited to cut, resized, burned, glued, bent, re-shaped, disassembled, attachments added to, improperly installed or used in a manner other than intended.

The company makes no other express or implied warranty or representation of any kind whatsoever including any warranty of merchantability or fitness for a particular purpose and all such other warranties are hereby included.

The Company's maximum liability hereunder is limited to the purchase price of the product. In no event shall the Company be liable for any consequential, indirect, incidental, or special damages of any nature arising from the sale or use of the product, whether based in contract, tort, strict liability, or otherwise.

Note: Some jurisdictions do not allow limitations on incidental or consequential damages or how long an implied warranty lasts, so that the above limitations may not fully apply. This warranty gives specific legal rights and you may also have other rights which may vary from jurisdiction to jurisdiction.

For complete warranty and repair information Call 888.982.7800 or visit upsite.com

U.S. and International Patents Pending



+1.888.982.7800 505.798.0200 info@upsite.com upsite.com